



blaze solo

part number 9805-130

POLE ASSEMBLY PART



Main Tent Pole (1) Silver
Part No. 9805-1001

Foot Pole (1)_ Gold Tips
Part No. 9805-1002

Rainfly
Part No. 9805-1051

1 Layout & Positioning of Tent, Pole Assembly


- Layout and position tent with door facing desired direction. (illus. 1)
- For best results in windy conditions position end of tent into the wind.
- Stake down tent corners using the stake loops. Keep the floor taut. Unzip door. (illus. 2)
- Assemble Frame Poles by interlocking shock-corded sections. This will make one long and one short curved pole.
- Insert the longer pole through the pole sleeve located in the middle of the tent and the shorter pole into the sleeve at the foot of the tent (illus. 1)

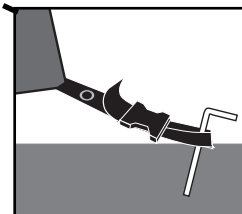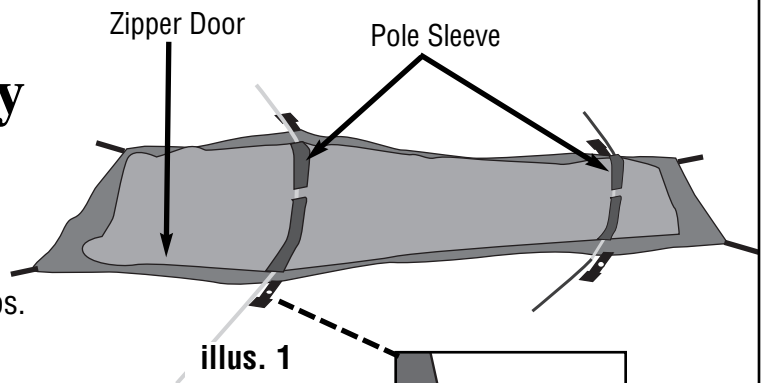


illus. 2
Tent stake through Loop

2 Connect Frame to Tent

- Insert one Pole Tip into grommet on stake loop located at middle edges of the tent.(illus. 3).
- Go to opposite end of pole and gradually apply pressure to the pole forming an arch until you are able to insert the pole tip into the grommet. (illus. 3 & 4)

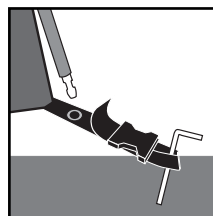



illus.3
Insert Pole Tip into grommet

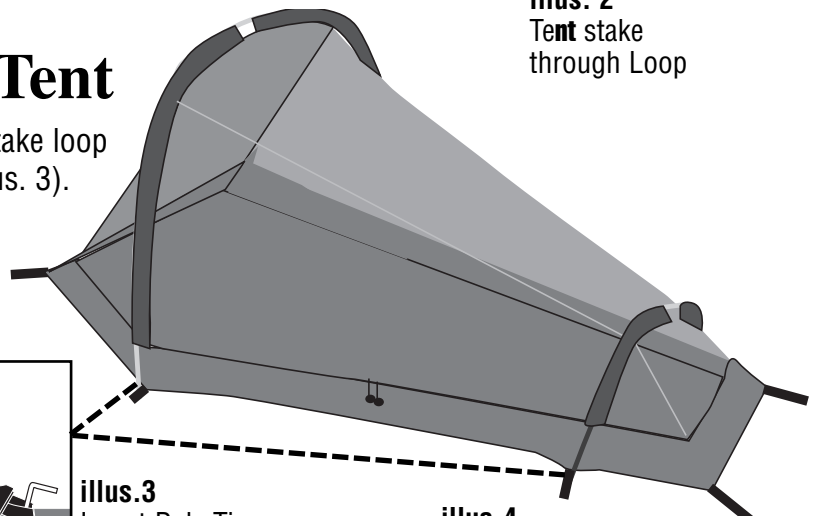

illus.4
Tent completely set up and staked out.

3 Attach Rainfly

- Layout the Rainfly and locate the logo (illus.5)
- Drape Rainfly over tent frame, the logo should be at the foot of the tent. (illus. 6)
- Attach velcro loops located in the center on the underside of rainfly, to the tent poles between the pole sleeves.
- Connect the clips on the rainfly (found at the Rainfly corners) to the stake loops at the corners of the tent. (illus. 6 & 7)
- Pull stake loops out away from tent until Rainfly is taut. (illus.6).
- Stake out Rainfly at the front and rear.
- Extend guylines, in front and rear of rainfly, out away from tent and stake out taut.

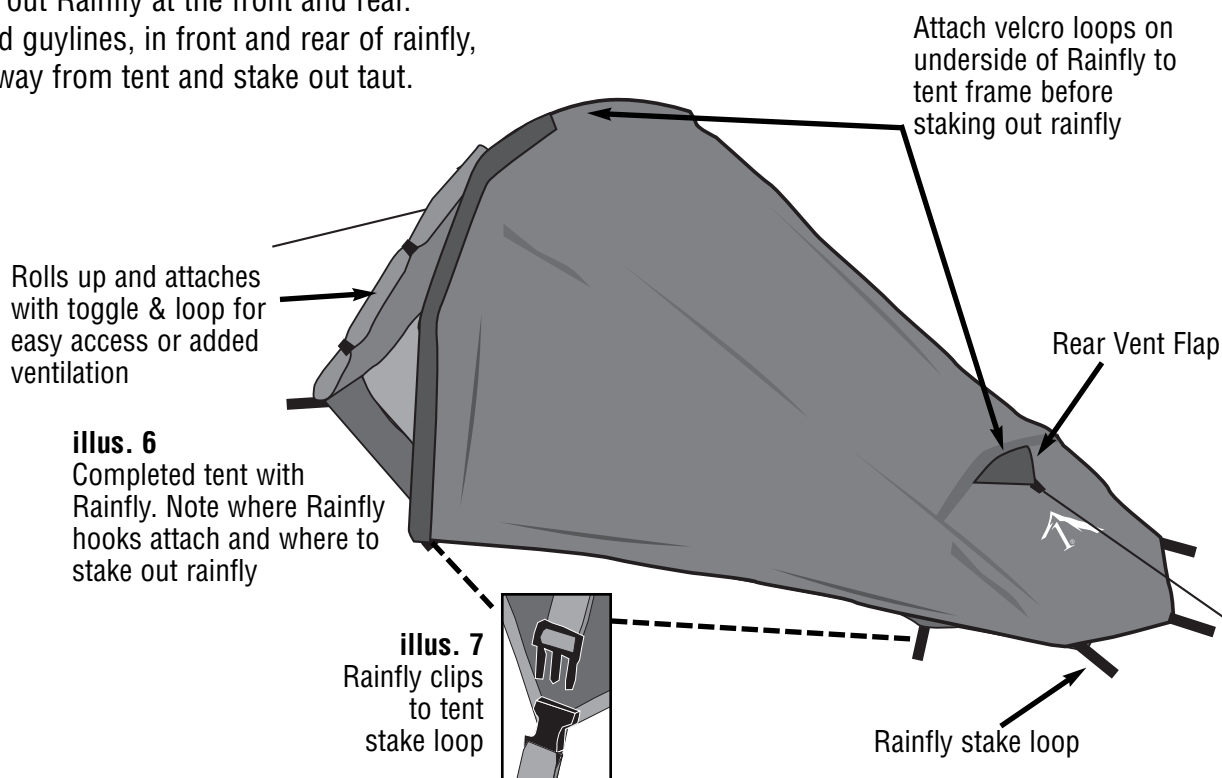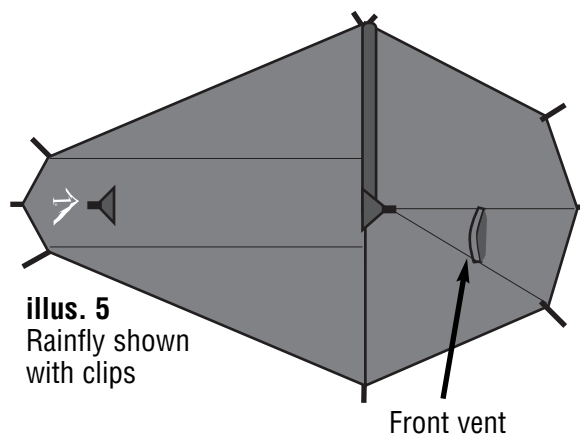

Pro-Tips

- Under certain conditions (cold weather, high humidity, etc.) condensation will form on the inside surfaces of your tent. Condensation is caused by water vapor from your breath, perspiration, or any wet clothing inside your tent. It is NOT LEAKAGE through the tent fabric. Staking out the vent flaps on the front and rear rainfly, allowing good ventilation through the tent, can minimize condensation.
- Never store tent, even for a short period of time, without drying it thoroughly and brushing off caked dirt. Do not pack stakes or poles inside your tent. Use separate storage bag.
- STAKES SHOULD BE REMOVED BY PULLING ON THE STAKE ITSELF. NEVER PULL ON THE TENT FABRIC OR TENT STAKE LOOP TO REMOVE STAKE.
- TENT POLES SHOULD NOT BE LEFT TELESOPED TOGETHER DURING STORAGE.



3600 N. Hydraulic • Wichita, Kansas 67219
1-800-835-3278 • www.coleman.com